




STANDARD KIT STARLINK


What's In The Box

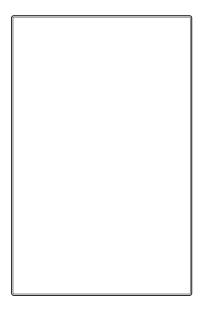

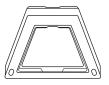

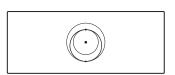

Standard

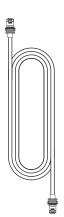


Starlink Cable 15 m (49.2 ft)

Kickstand



AC Power Cable 1.5 m (4.92 ft)



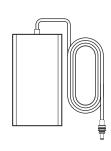


Power Supply

1.5 m
(4.92 ft)


Package Weight: 6.73 kg (14.83 lbs)

Package Dimensions: 652.4 x 451.7 x 97.9 mm (25.69 x 17.78 x 3.84 in)

STANDARD STARLINK

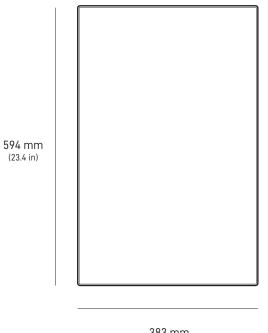



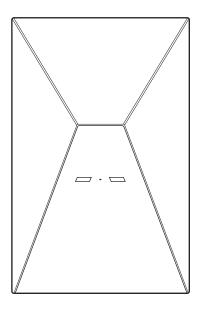

383 mm (15.07 in) 39.7 mm (1.5 in)

Antenna Electronic Phased Array

Field of View 110°

Orientation Software Assisted Manual Orienting

Weight 2.9 kg (6.4 lb)

3.2 kg (7 lb) with Kickstand

3.8 kg (8.3 lb) with Kickstand & 15 m Cable


Environmental Rating IP67 Type 4

Operating Temperature -30°C to 50°C (-22°F to 122°F)


Wind Speed Operational: 96 kph+ (60 mph+)


Snow Melt Capability Up to 40 mm / hour (1.5 in / hour)

Power Consumption Average: 75 - 100 W

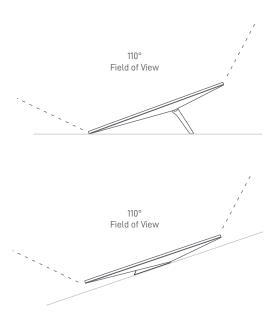


KICKSTAND

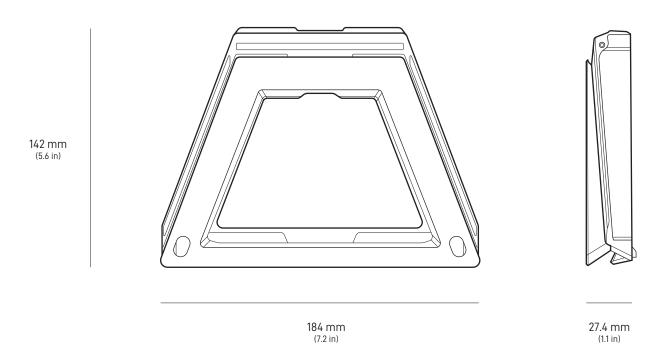

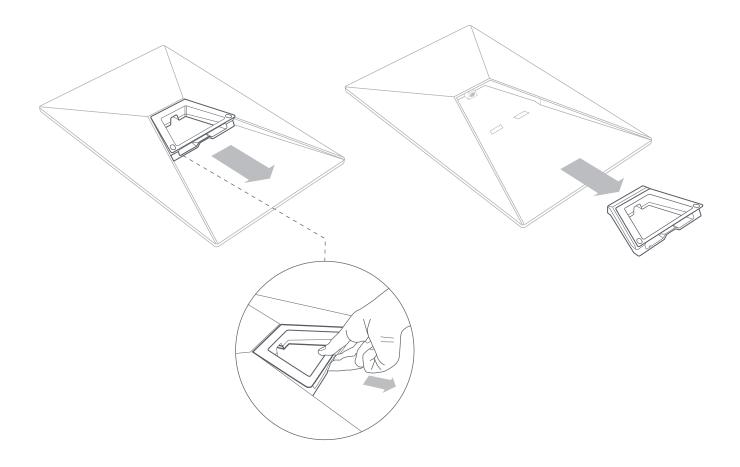


ROUTER STARLINK

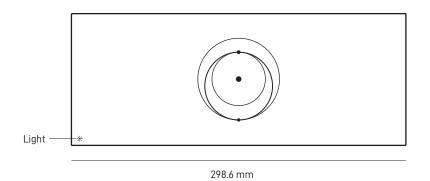



120.8 mm (4.75 in)

43.4 mm (1.70 in)

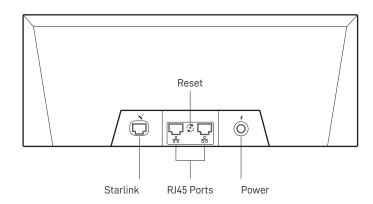

Product Dimensions 43.4 x 298.6 x 120.4 mm (1.7 in x 11.76 in x 4.74 in)

Wi-Fi Technology 802.11 a/b/g/n/ac/ax

Generation WiFi 6

Radio Tri Band 4 x 4 MU-MIMO

Ethernet Ports Two (2) Latching Ethernet LAN ports with removable cover

Coverage Up to 297 m² (3,200 ft²)

Operating Temperature -30°C to 50°C (-22°F to 122°F)

Weight 0.57 kg (1.25 lbs)

Security WPA2

Environmental Rating IP56 Rated (Water Resistant), configured for indoor use


Power Indicator LED | face plate, lower left corner of router

Mesh Compatibility Compatible with Starlink Gen 2 and Gen 3 Mesh Nodes, up to 3 Starlink Mesh Nodes

*Not compatible with 3rd party mesh systems

Devices Connect up to 235 devices

POWER SUPPLY STARLINK

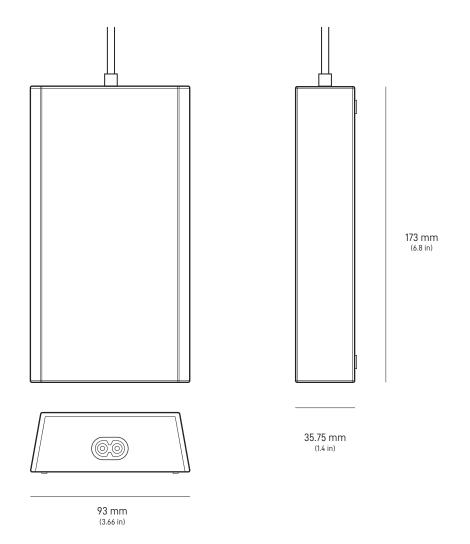


Product Dimensions 173 x 93 x 35.75 mm (6.8 in x 3.66 in x 1.4 in)

Weight 0.65 kg (1.43 lbs)


Environmental Rating IP66 Type 4


Operating Temperature -30°C to 60°C (-22 to 140°F)

Power Specifications $100-240 \text{V} \sim 2.5 \text{A} 50 - 60 \text{ Hz}$

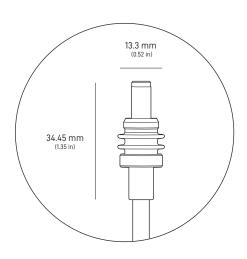


STARLINK CABLE STARLINK

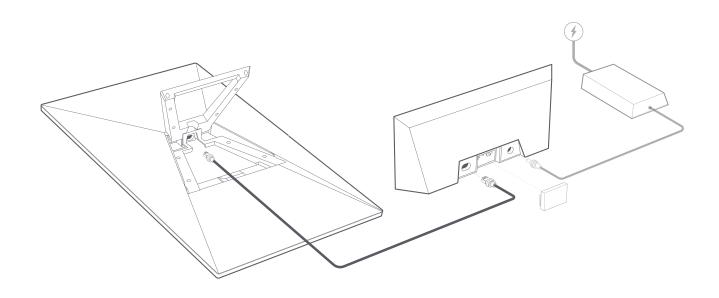

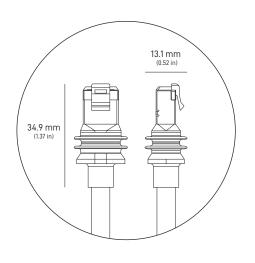



Pin 1
Shield
8
7
6
5
4
3
2
1


Wire Color	Pin 2
Drain - Bare Wire	Shield
Brown	8
White / Brown	7
Green	6
White / Blue	5
Blue	4
White / Green	3
Orange	2
White / Orange	1
	I

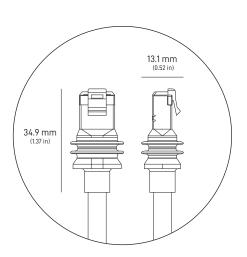

POWER SUPPLY CABLE STARLINK

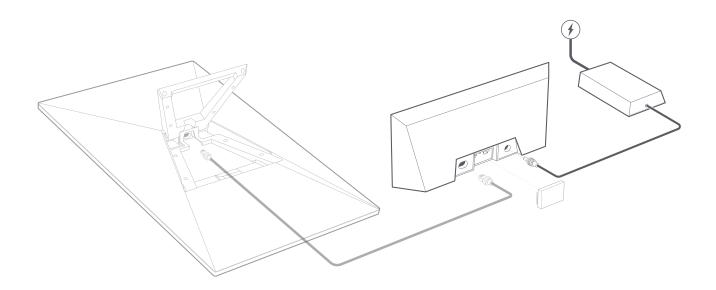


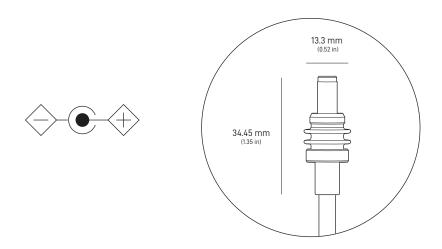


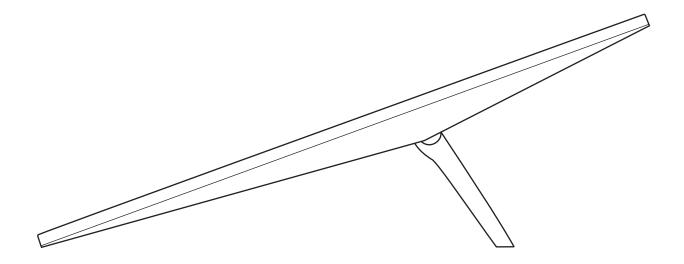


STANDARD KIT STARLINK

What's In The Box

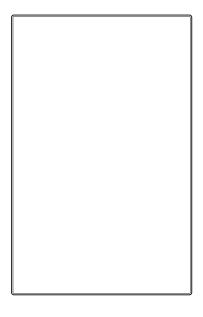

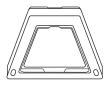


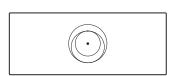

Standard


Kickstand

Gen 3 Router

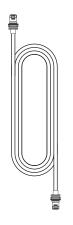




15 m (49.2 ft)

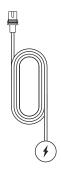

AC Power Cable

1.5 m (4.92 ft)

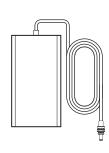

Power Supply Unit

1.5 m (4.92 ft) INSTALL STARLINK

1 | Download the Starlink App

Scan the QR code to download the Starlink App.








2 | Install the Cables

Lift the kickstand and plug one end of the provided cables into your Starlink with the cable locking feature facing up. Ensure the plug is fully inserted such that the plug face is flush with the surface. To remove cable, pull firmly outward as there is no release tab.

Route the other end of the Starlink cable to your Router and plug it into the port number 1 indicated with the antenna symbol on the back of the router.


Plug the Gen 3 Router into a power outlet using the power cable and power supply.

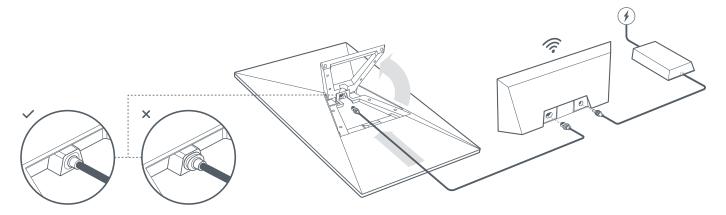


3 | Find A Clear View of the Sky

Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite, such as a tree branch, pole, or roof, will cause service interruptions. Use the obstruction tool in the App to ensure you have selected a suitable mounting location.




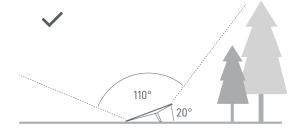

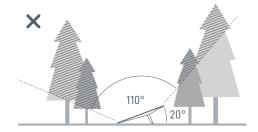


INSTALL STARLINK

If you could not find a clear field of view from the ground level, consider installing in an elevated location, like a roof, pole, or wall. Additional mounts and accessories are available for purchase on the Starlink Shop.

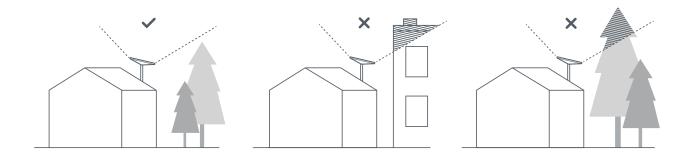


4 | Connect and Align Starlink

Step through the Starlink install process on the Starlink App. Once connected, an alert on the App will show if you need to rotate Starlink to be properly aligned. Click the alert to use the alignment tool.

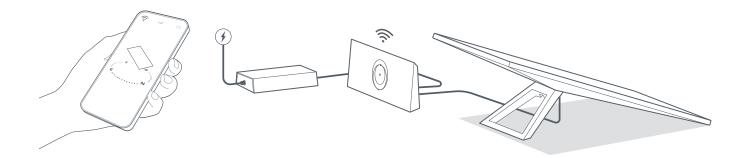

5 | Connect to WiFi

1. On your device, find and connect to the STARLINK network in your WiFi settings.

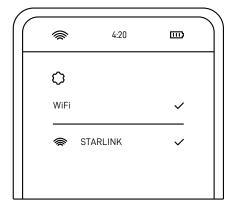

- 2. Once connected, a browser window will open prompting you to enter a new SSID (Network name) and password. This step is optional but recommended.
- 3. You are now connected! Open the Starlink App to customize additional settings, check your connection, and more.

Can't Get Online?

- 1. Open the Starlink App to check for any alerts, outages, or obstructions.
- 2. Check the WiFi router light.


Flashing White Light Trying to connect. The light will turn solid white when setup is complete and the router is connected to the internet, or solid red if the router cannot get a connection to the internet in 20 minutes.

Solid White Light Connected to internet. Will turn off after 1 hour.


No Light No power to router. With good connection, the light will turn off after 1 hour.

Red Light Not connected to the internet.

Violet Light Router is in bypass mode. Will turn off after 1 hour. Factory reset required to exit bypass mode.

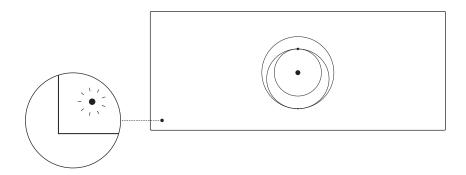


- 3. Make sure everything is securely plugged in and there is no damage to hardware or cables.
- 4. Power cycle the router by unplugging from power and then plugging back in.
- 5. Factory reset the router by pushing the reset button with a paper clip.

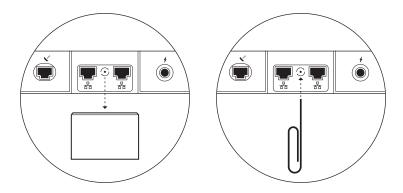

6. If none of these work, contact Starlink Customer Support in the app or the Support section of starlink.com

Using the Extra RJ45 Ports

1. Remove the RJ45 cover.

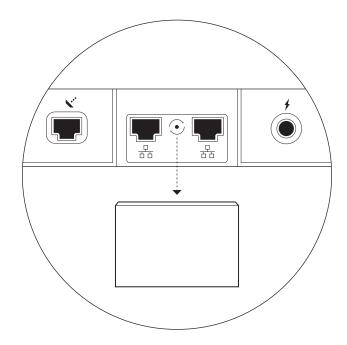

2. Plug in your own ethernet cable to port 1 or 2. Connect the other end of your cable to your wired mesh or 3rd party hardware.

